





PWR33 HOME - EVSP - 3.7 / 7.4 / 11 / 22 kW WALLBOX

Why should you choose POWER ELEKTRONİK Brand "Electric Vehicle Charger'"?

With the increasing number of electric cars preferred day by day, do not forget that it is necessary to meet the charging needs of the vehicles with the most reliable brand and economical prices, and to receive customer service and service support on time when you need it.

PWR33 HOME-EVSP-3.7 / 7.4 / 11 / 22 kW WALLBOX Vehicle Charger with Type-2 Socket Output



PWR33 HOME - EVSP - 3.7 / 7.4 / 11 / 22 kW WALLBOX

This Wallbox AC Type 3.7/7.4/11//22 kW ev charger produced for individual home users with Type-2 socket, Wallmount EV Charger.

- » 3.7/7.4/11/22 kW Power
- » Vehicle charging with 16/32 Amperes
- » 1/3 Phase, 380/400 Vac, 50 Hz Input
- » Suitable for all ev plugin vehicles
- » Bluetooth and WiFi connection optional available
- » Charging control with RFID card
- » Displaying charging status with LED Colors
- » Polycarbonate plastic body, Durable design
- » Type-2 Socket outlet
- » Plug & Play compatible
- » IP55 Protection class
- » 1 Year Warranty
- » User friendly
- » Easy assembling
- » Easy to use
- » Wall mounting
- » CE certification
- » Made in Turkey Production
- » Wide Technical Service






















WALLBOX EV CHARGER TECHNICAL INFORMATIONS

Properties	Explanation		
Maximum Power	3.7 / 7.4 / 11 / 22 kW		
Input/Output Voltage	1/3 Phase 380/400 VAC		
Input/Output Current	16/32 A		
Frequency	50/60HZ		
Body Case	PC Polycarbonate		
Installation/Assembly	Wall - Stand Mounted		
OCPP	X		
Display Screen	X		
Bluetooth	✓ Optional		
GSM	Х		
WIFI	✓ Optional		
APP	✓ Optional		
Ethernet	✓ Optional		
MID Energy Meter	X		
DLB	✓ Optional		
Plug&Charge	✓		
RFID	✓		
Emergency Stop	X		
Warning LEDs	✓		
RCD	30mA external recommending to install		
IP Protection	IP55		
Impact Protection	IK08		
Certification	CE		
Certification Standard	EN/IEC 61851 - 1:2017, EN/IEC 61851 - 21 - 2:2018		
Guarantee	1 year		
Operating temperature	-30°C / 65°C		
Product Dimensions	230*215*149mm (H*W*D)		
Weight	6 kg		
Package	Cardboard box		












Bluetooth

Wi-Fi



YOU MAY INSTALL CHARGER TO THE WALL


You may install wallbox ev charger to the wall thanks to back hanging mechanism. Recommended installation height is 160 cm.

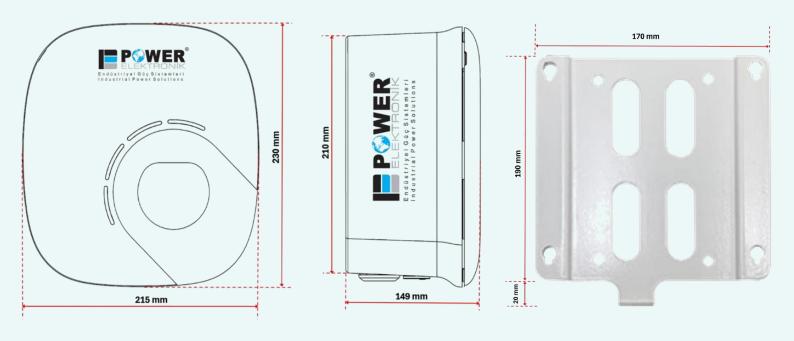





EV CHARGER ELECTRICAL INFRASTRUCTURE INFORMATIONS

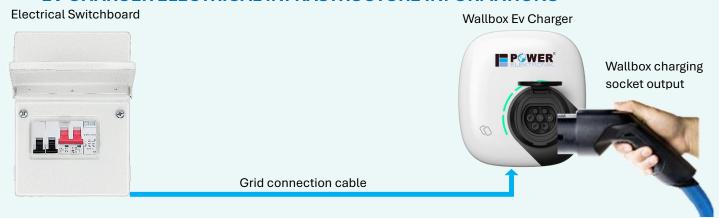

Wallbox electrical infrastructure diagram shown as on above, electrical connection cables and fuses should be selected according to below power size table.

POWER	3.7 kW	7.4 kW	11 kW	22 kW	2 x 22 kW	
Input phases	1 phase	1 phase	3 phase	3 phase	3 phase	
Current	16A	32A	16A	32A	2 x 32A	
Input Fuse	1 x 25 Amper	1 x 40 Amper	3 x 25 Amper	3 x 40 Amper	3 x 100 Amper	
Cable diameter	3 x 4 mm ²	3 x 6 mm ²	5 x 4 mm ²	5 x 10 mm ²	4 x 25+16 mm ²	
Cable type	1*ph +	1* ph +	3* ph +	3* ph + 1*	3* ph +	
	1*Neutral +	1* Neutral +	1* Neutral +	Neutral +	1* Neutral +	
	1*Grounding	1* Grounding	1* Grounding	1* Grounding	1* Grounding	
Max cable	30 Meter	30 Meter	60 Meter	100 Meter	100 Meter	
distances	30 Meter		60 Meter			
Notes	Max cable diameters are for indicated distances, diameter increases in case of distance increases					
	RCD residual current protection relay recommends to use by yourself.					
	Highly recommending to use surge arrester for lightening protection.					




www.powerelektronik.com.tr



WALLBOX DIPSWITCH SETTINGS

You can find the dipswitch under cable connection socket and may set your charging current and RFID card control activation by this switchs .

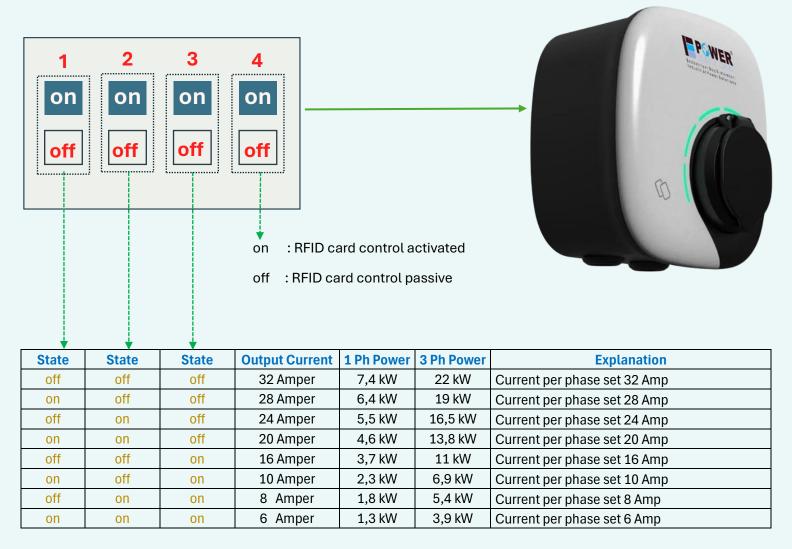

- Note-1 You can't set Power upper than actual Power.
- Note-2 After you set Power currents, re-check the cable sizes and fuse rates and validate it.
- Note-3 3 Phase Wallbox if you want to use as 1 phase, connect just 1st (R) phase and neutral (Power size drops 1/3)
- Note-4 Wallbox and EV Car doesnt allow to start charging in case of voltage exceeds 1.5 Volt between Ground-Neutral lines. Reduce the grounding quality in that case.



LED COLOR LIGHTS GIVES CHARGING STATUS INFORMATION

StandBy:Blue Continuesly

EV Car not connected, Charger is ready and available to charge

Connecting: Green Blinking

Charging socket plugged, EV Car and Charger communicated, you may start to charge by RFID card or application.

Charging: Green Continuesly (Continuesly

After activated by RFID or application; car and charger communicates, handshakes and charging starts after all is ok.

Fault: Red Continuesly

.

Charging operation has fault. The reason can be communication error with EV Car or there may weak grounding. So on EV Car doesn't accepts charging commands.





YOU MAY ACTIVATE CHARGING OPERATION BY RFID CARD

You will get 2 type RFID key. "KeyFob" or "Card". Both can control charging device. For our EV chargers you may define limitless RFID user.





After connecting the cable between the vehicle and the charger, you can start charging by scanning your RFID card. To finish charging, either scan your RFID card or have the vehicle complete the charging process.



CONTROL YOUR EV CHARGING BY BLUETOOTH & WI-FI

Home-type individual car chargers can be provided with great features by adding an optional Bluetooth & Wi-Fi card.

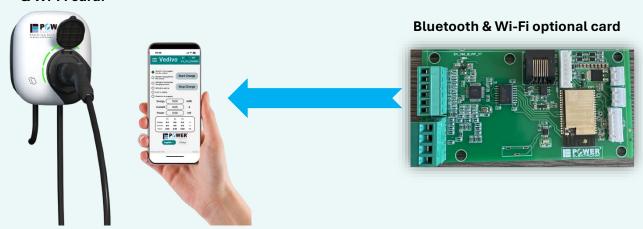

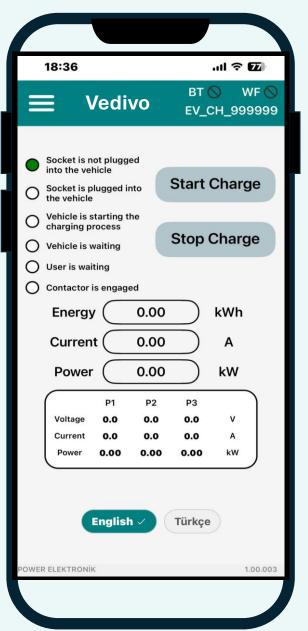

For this purpose, the "Bluetooth & Wi-Fi card" developed in our R&D must be added to your existing charger or the charger you will purchase.

After adding the card, you need to download the software called "Vedivo", which we developed ourselves, from the AppStore or PlayStore and install it on your mobile phone.

Advantages of this optional addition:

- The software is compatible with Android and IOS
- Available languages are Turkish and English
- Can adjust the charging current between 6A and 32A
- Can see the voltage and current of each phase
- Can see the charging current and charging power instantly.
- You can stop and start charging remotely
- You can monitor and control the charger from a maximum of 30 meters via Bluetooth without an internet connection.
- You can see whether the charging port is plugged into the vehicle, the charging status, and whether the vehicle is charging.
- You can become an administrator, define multiple users, and monitor charging records.
- You can save charge information as a .csv file

 Thanks to the Wi-Fi connection, you can control and monitor the charger remotely.
- Thanks to the RS 485 connection, you can connect it to your electricity meter that supports this connection and automatically adjust the charging power to avoid damaging your system by performing dynamic load balancing.